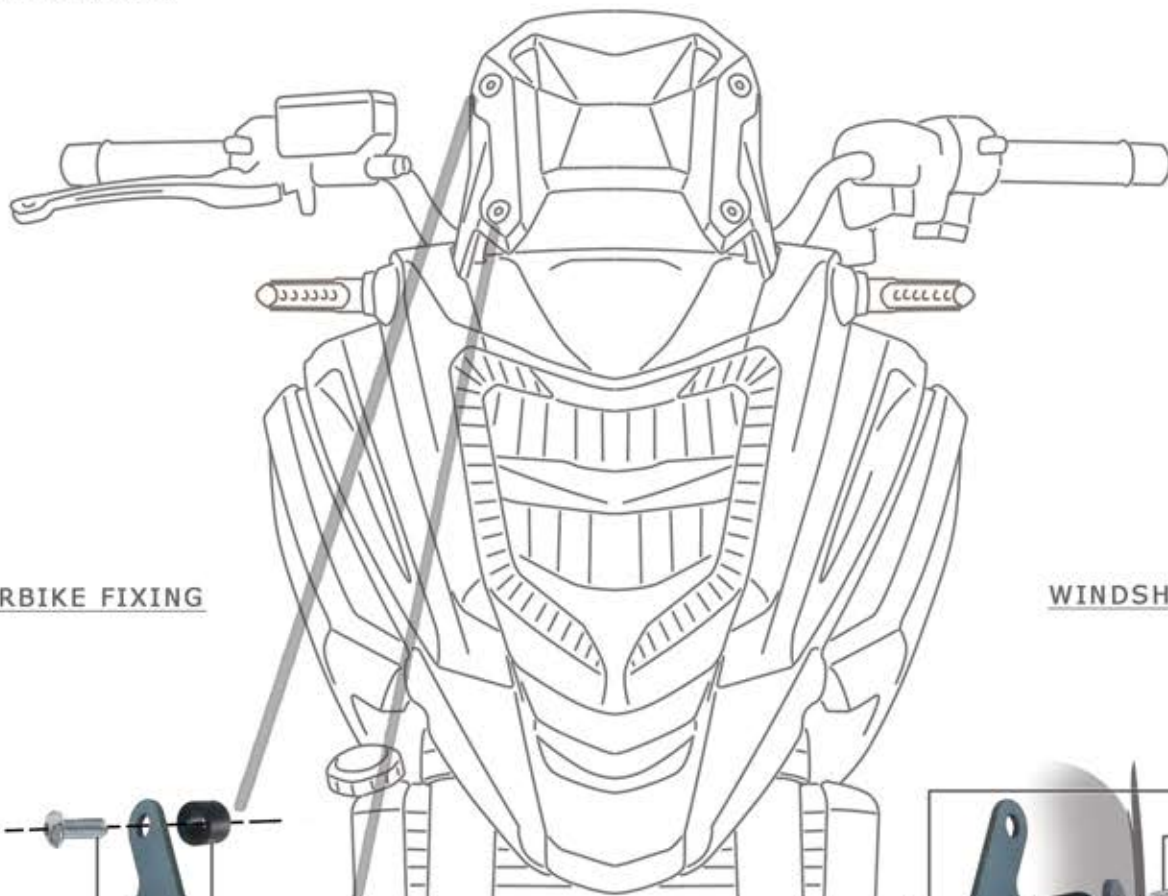


**MOUNTING PROCEDURE****KIT WINDSHIELD  
HONDA NC750-X '16****HNC7300-16****KIT**

- X1. PLEXIGLASS
- X2. SPECIFIC BRACKETS
- X6. THICKNESS H.10 PVC
- X2. THICKNESS H.15 PVC
- X2. SCREW "ROUND HEAD" 5X30
- X6. SCREW "ROUND HEAD" 5X25
- X4. AUTOLOCK NUT Ø 5
- X4. WASHER Ø 5 LARGE
- X4. TEFLON WASHER Ø 5
- X4. RUBBER WASHER

[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)**MOUNTING PROCEDURE:**

- REMOVE THE ORIGINAL WINDSHIELD AND INSTALL THE BARRACUDA WINDSHIELD BRACKET USING THE SCREWS AND THE THICKNESS IN THE KIT;
- PUT IN POSITION ALL AS IN THE ILLUSTRATED SCHEME;
- FIND THE CORRECT POSITION OF WINDSHIELD ON THE BRACKET ALREADY FIXED AND PROCEED TO LOCK ALL SCREWS;

**MOTORBIKE FIXING**

- Screw 5x25
- Thickness H.10
- Specific bracket

**WINDSHIELD FIXING**

- Washer Ø 5
- Screw 5x30
- Thickness H.15
- Plexiglass
- Thickness H.10
- Rubber washer
- Teflon washer
- Screw 5x25
- Nut Ø 5

NOTE: DON'T LOCK TOO MUCH TO AVOID PLEXIGLASS BROKEN.